73190 Rev 1 28/4/04 6:23 PM Page 1

morphy richards®

Pod compact bagless vacuum cleaner

Please read and keep these instructions

UK
Helpline 0870 060 2604
Replacement parts 0870 167 6635
Ireland
1800 409119

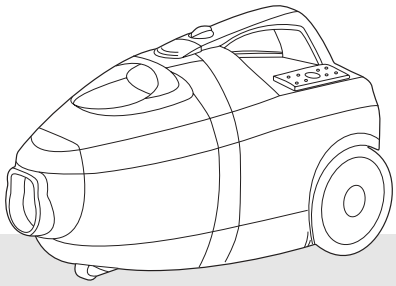

getting the best from your new cleaner...

If your cleaner is not picking up as well as it should, please check

- **Filters**

It is important that the filters are cleaned regularly to allow air through the appliance. Shake to remove dust, the filter can also be washed in warm water and left to air dry.
IMPORTANT - Ensure filter is totally dry before refitting into machine. A spare filter is provided.

- **Blockages**

Check the tools and hose for blockages.

- **Variable power dial**

If suction is low and the product has been emptied, the filters cleaned and the product checked for blockages, check that the variable power dial is set to maximum by turning clockwise.

PARTS & 2 year guarantee LABOUR

CE

www.morphyrichards.co.uk

Important safety instructions

The use of any electrical appliance requires the following of common sense safety rules.

Primarily there is danger of personal injury and secondly danger of damage to the appliance and property. These are indicated in the instructions text by the following two conventions:

WARNING: Danger of personal injury

IMPORTANT: Damage to the appliance

In addition we offer the following essential safety advice.

Location

- Do not use or keep this product outside when it is raining.
- Do not store the appliance near hot ovens or heating appliances.

Mains lead

- Do not allow the mains lead to become strained or run this appliance over it.
- If the electrical cable becomes damaged the complete cable assembly must be replaced. Do not attempt this task yourself, contact us using the helpline number.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.

Other safety considerations

- Never use in the presence of explosive liquids or vapours.
- Never pick up inflammable or poisonous liquids such as petrol, copier toner, or other volatile substances. Never pick up acids, asbestos or asbestos dust.
- Always disconnect the appliance from the mains supply after use or prior to cleaning or emptying.
- The appliance should never be left running unsupervised.

Product safety

- Never use the appliance without the filter installed.
- Never use the appliance to vacuum hot ashes, broken glass, sharp objects or liquids.
- Never modify the cleaner in any way.
- Repairs to electrical appliances are only to be undertaken by trained personnel. Unprofessional repairs can be dangerous for users.
- Use only genuine Morphy Richards spare parts and accessories.

Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

If you cut off the plug and let go of the cable it will rewind into the machine. Therefore you must pull out a length of cable and secure it before cutting off the plug and refitting a new one.

WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the 13 amp plug require replacement, a BS1362 13 amp fuse must be fitted.

Features

1. Pod release latch
2. Variable power control
3. Power on/off switch
4. Handle
5. Cable rewind button
6. Wheels
7. Dust pod
8. Hose inlet
9. Hose release button
10. Storage hook
11. Exhaust filter and cover
12. Tube storage slot

Accessories you should have

13. Floor nozzle
14. Hose/handle with airflow control
15. Upholstery nozzle
16. Crevice tool
17. Brush tool (clips onto 16)
18. Extension tubes x 2
19. Tool storage clip

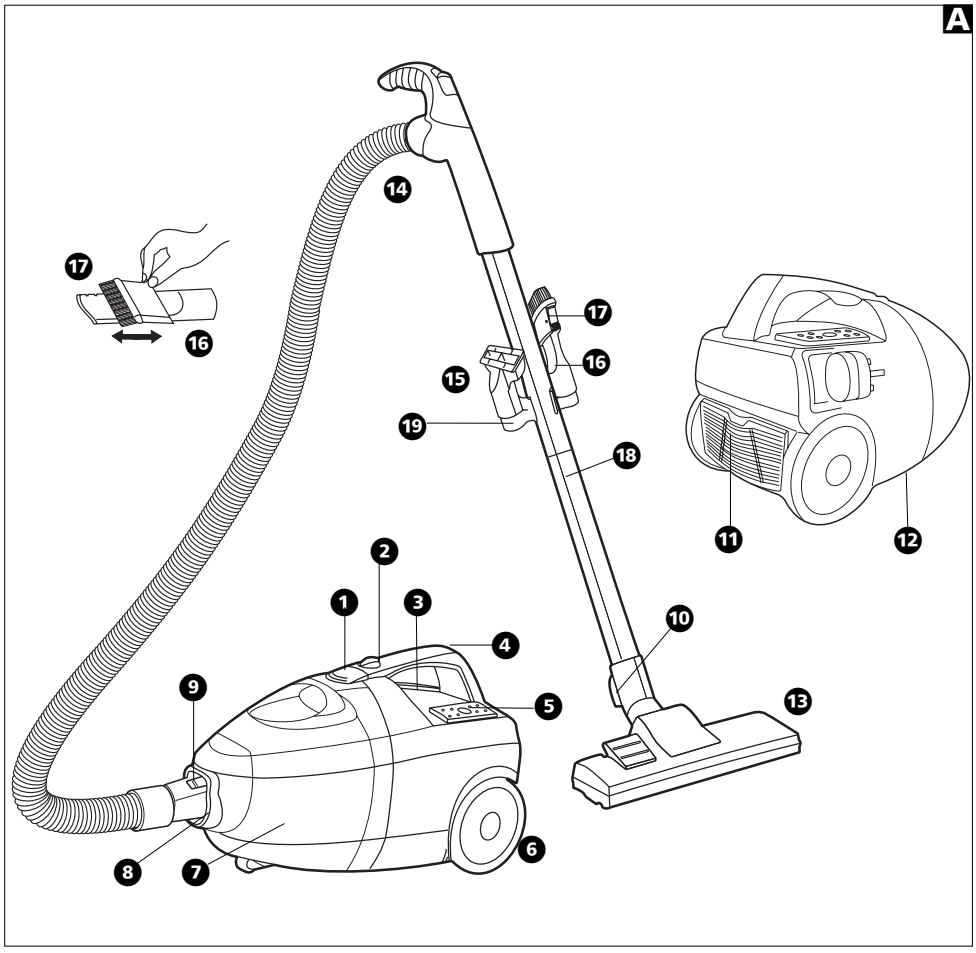

Assembly

Your Pod vacuum cleaner has an efficient suction action to provide high levels of cleaning on all types of surface around the home.

Switch off before fitting or removing accessories.

Insert the flexible hose

Insert the flexible hose ⑭ in the hose inlet duct ⑧ on the front of the product, press until it clicks into position. **B**

To remove the flexible hose

Press the release button to release the flexible hose. Pull the hose firmly from the hose inlet duct.

Fitting the extension tubes and accessories

Join the two extension tubes ⑱ together and attach the extension tubes to the handle end ⑭ of the hose. **A** Some tasks may be easier with only one extension tube fitted.

Attach the floor nozzle ⑬ to the extension tubes. The floor nozzle can be used for carpets, rugs, hard floors and tiles.

Other accessories include:

- Crevice tool ⑯ for awkward places, corners and behind radiators etc.
- Brush attachment ⑰ for pelmets, delicate objects etc.
- Upholstery nozzle ⑮ for sofas, armchairs etc.
- Tools can be stored on the tool storage clip ⑲ that fits onto the extension tubes.

Controls

On/off control

Press the on/off pedal to start the machine, press again to turn off.

Variable power control

Turn the dial clockwise to increase the power for maximum suction or anti-clockwise to reduce suction when cleaning delicate surfaces such as curtains etc.

IMPORTANT: If suction power appears to be low check that the variable power dial is set to maximum.

Suction control on the handle

The suction power can be adjusted using the fingertip control on the handle. **C**

Closed : full suction

Open : low suction

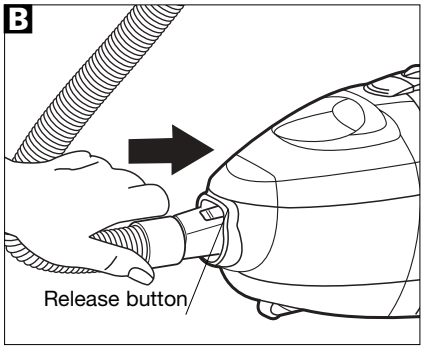

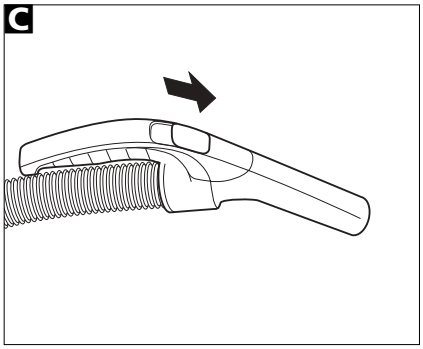

2 position wheeled floor nozzle ⓭

The brushes should be retracted for use on carpets and down for use on hard floors by adjusting the lever on the floor nozzle.

After vacuuming

1 Switch off the vacuum cleaner.
2 Unplug from the mains.
3 Use a hand or foot to operate the cable rewind ❺.

WARNING: When using the cable rewind, always hold the plug as the cable will rewind quickly.

Emptying the pod

1 Disconnect the cleaner from the mains socket.
2 Disconnect the hose from the hose inlet duct.
3 Remove the pod by pushing the pod release latch. D
4 Remove the filter basket and empty the pod into a waste bin. E

If the dust is tightly packed tap the front cover. Shake the filter basket into the waste bin, this will remove most of the dust.

Replacement filter basket

To maintain the suction of the cleaner the filter basket must be washed regularly (in warm water only, no detergent).

1 Allow the filter basket to air dry naturally.

IMPORTANT: Both parts MUST BE THOROUGHLY DRY before the assembly is re-fitted to the cleaner. An additional replacement filter basket is included so that the vacuum cleaner can continue to be used while the other filter basket is being washed and dried.

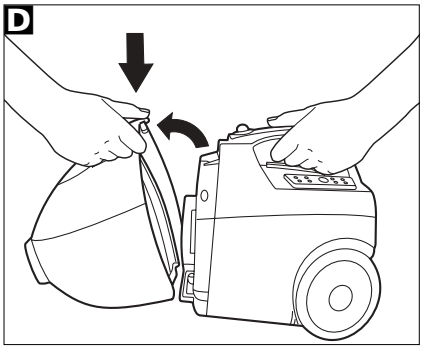

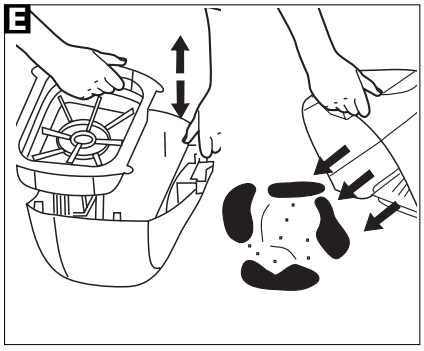

Reassemble

1 Replace the filter basket ensuring that the seal is good **F.** Then replace the pod onto the main body. **G**

Motor protection filter

This cleaner is fitted with a motor protection filter. NEVER USE THE VACUUM CLEANER WITHOUT THIS IN PLACE.

To clean the motor protection filter

1 Remove the filter from the filter grille. **H**
2 Rinse the filter in lukewarm water and DRY THE FILTER COMPLETELY.
3 Put the filter back into the filter grille and reassemble.

Storage position

The vacuum cleaner can be stored in an upright position. slide the storage hook ⑩ into the slot on the base of the product ⑫ and the tubes, hose and floor nozzle are held securely. **I**

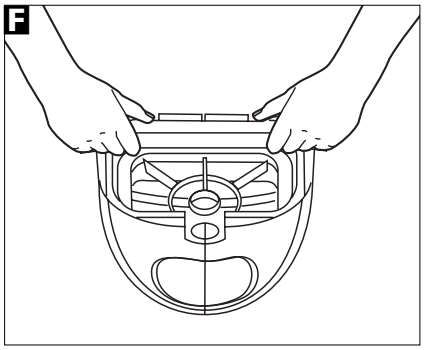

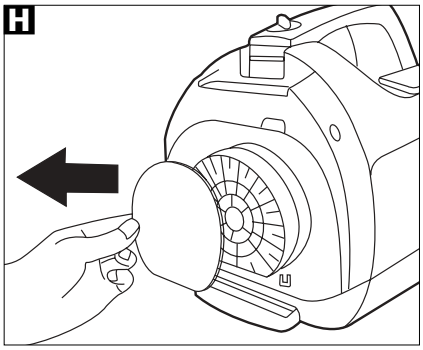

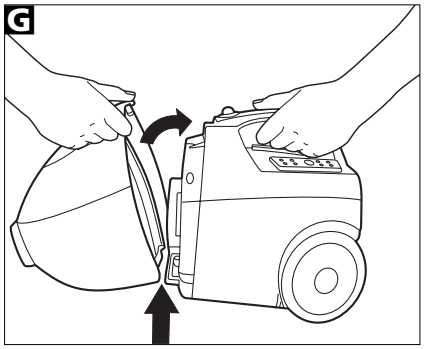

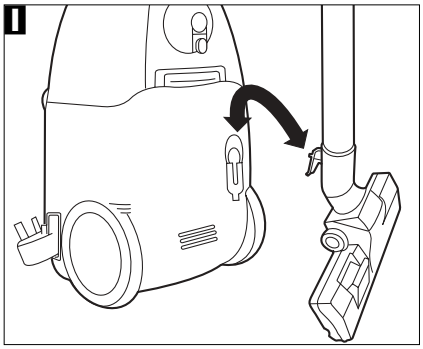

Changing and cleaning the exhaust filter

This filter should be replaced every 12 months or sooner if required.

Remove the exhaust filter grille by pulling the locking tabs towards you. J Remove the used filter. Insert the clean micro exhaust filter and replace the filter grille.

IMPORTANT

- All filters should be checked regularly for signs of damage, preferably after each cleaning task. The filters must be replaced immediately if they become damaged.
- Always disconnect the cleaner from the mains when checking filters.
- Always make sure all filters are fitted before use. Failure to do so may result in damage to your product.
- If the sound of the cleaner changes slightly, clean the filters and check for blockages.

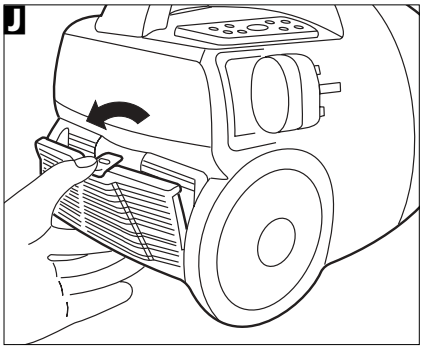

Care and maintenance

Your cleaner is manufactured to withstand normal day-to-day use, but an occasional wipe over with a damp cloth will help maintain its good looks. Abrasive cleaners should not be used.

Purchasing filters

Use original filters. Replacement packs can be purchased from specialist retailers or directly from our spares number.

Helpline

If you have any difficulty with your appliance do not hesitate to call us. We are likely to be more help than the store from where it was bought.

Please have the following information ready to enable our staff to help you.

- Name of product
- Model number as shown on the underside of the appliance.

UK
Helpline 0870 060 2604
Replacement parts 0870 167 6635
Ireland
1800 409119

Your two-year guarantee

- It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no. Serial no.

All Morphy richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the helpline number quoting model number and serial number on the product, or write to Morphy Richards at the address shown. You will be asked to return the product (in secure, adequate packaging) along with a copy of proof of purchase. Subject to the exclusions set out below (1-5), the faulty appliance will then be repaired or replaced and dispatched usually within seven working days of receipt.

If you suspect a fault, follow the simple checks detailed below before returning the appliance or calling the helpline.

- Check the dust bag and filters for blockages.
- Check the hose and tubes for blockages.
- Check the plug is firmly in the socket and the supply is switched on.
- Make sure the socket is working by trying another appliance.

If for any reason this item is replaced during the two-year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original receipt or invoice to indicate the date of initial purchase.

To qualify for the two-year guarantee the appliance must have been used according to the manufacturers instructions. For example filters must be cleaned regularly and replaced if damaged.

Morphy richards shall not be liable to replace or repair the goods under the terms of the Guarantee where:

1 The fault has been caused or is attributable to accidental use, mis-use such as neglecting to regularly clean filters or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
2 The appliance has been used on a voltage supply other than that marked on the products.
3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
4 Where the appliance has been used for hire purposes or non-domestic use.
5 The guarantee excludes consumables such as filters.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.

Morphy richards products are intended for household use only.

Morphy richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

morphy richards®

The After Sales Division
Morphy richards Ltd, Mexborough
South Yorkshire, England, S64 8AJ
Helpline (office hours)
UK 0870 060 2604
Republic of Ireland 1800 409119